

Additional Instructions

Battery connection

If your VIGIL doesn't start as stated in the manual disconnect the batteries for 1 minute. This will allow the capacitor to have time to discharge. Then repeat step 1.

DELAY mode

Detection delay.

Delay between each event if necessary.

Example: Adjust the delay to 10 minutes.

Event is recorded at 6:00, next event to be recorded at 6:10

Event Capture on / off

After you have activated the event record, please take note that there is a 2 minute delay before the VIGIL starts recording events.

4 AA Batteries

Use alkaline batteries because they are better in cold weather. Never use 9 volt batteries, you can cause serious damage to the VIGIL.

Storage

After hunting season, store your vigil by removing the batteries and making sure that the interior is dry. This will prevent damage due to oxydation.

Warranty

VIGIL Game Monitors has a 1 year warranty. Warranty service for VIGIL products may be obtained by delivering the defective product, accompanied by a copy of the proof of purchase date, to Circuitronique Estrie Inc Service center during the applicable warranty period. Products returned to service center must be sent prepaid, insured and packaged appropriately for safe shipment. The repaired item will be shipped to customer, by Circuitronique Estrie Inc. no later than (30) days after receiving postage paid.

Available optionnal connections:

Camera



Camcorder



Computer



User's Guide

Thank you to have chosen one of our **Game Monitors VIGIL 650**.

Here is your VIGIL serial number:

VIGIL is the result of the intensive research by a special entreprise in high hand electronic product conceptions. It was designed to help you to have more hunting success.

The **VIGIL** detects the movements of your big game or humain within a certain range and records the hour, minutes, day, month and direction of game. The **VIGIL** makes no noise, has no string or light to draw attention to its location.

The **VIGIL** is your guide. It solves the problem of **supervising a trail, rubbing and scraped areas**. Your **VIGIL** is easy to use and has many interesting features to help you to have a better evaluation of your hunting territory.



Made in Canada by:
Circuitronique Estrie Inc.
6291 Tellier, Rock Forest, Quebec, Canada J1N 3A8
Phone: (819) 864-4637 Fax: (819) 864-4637
WEB site: www.vigil.qc.ca
email: info@vigil.qc.ca

Step 1: Install batteries in Vigil and close the back door.

- < You will see language English. At this point you can choose either French or English by pressing A key. Press M key to continue.
- < At the prompt V650 and the sentence on line 2 will scroll.
- < ‘ **VIGIL made by CE Inc. 819-864-4637 www.vigil.qc.ca**’
- < Press M key when you are ready to continue
- < This sentence will scroll in the screen.
- < ‘**Enter your six digit passcode**’
- < Press M Key when you are ready to continue.

Write your own 6 digit code here: _ _ _ _ _ _

The code you enter will always be your code. Enter the six digits and read carefully the instructions below.

Security Code Entry

- < Press and release F key to move the cursor under the digit you want to set
- < Press and release A key to enter the digit of your code
- < to validate your six digit code the cursor needs to be under the last digit and after that press and release M key to validate.
- < If you hear a beep with 2 tones your code has been validated
- < If you hear a beep with 1 tone your code has not been validated
- < (please try step 1 again)

After you enter your six digit passcode you see **READY IN 02:00.**

Event Browsing menu

By pressing the M key you will see EVENTS - 075 . To visualize each event press the F key, the display will show EVENTS - 001 / 075 for the first event. Pressing the F key will show events in ascending order while the A key will display in descending order. Continue to press and release the F or A key to visualize the next event. Press the M key to pass to the next menu.

Date and Time Adjustment menu

- < When entering this menu you will see ADJUST D & TIME
- < By pressing the F key you will see Hour : Minute Month, date and under Hour you can see the cursor. At this point you can adjust the hour by pressing A key.
- < By pressing the F key you move the cursor under minute. By pressing A key you will adjust the minute.
- < By pressing the F key you move the cursor under month. By pressing A key will adjust the month.
- < By pressing the F key you move the cursor under day. By pressing the A key you adjust the day.
- < Pressing the F key will show the adjusted Date and time
- < Press the M key to pass to the next menu.

Battery Test menu

- < When entering this mode you will see BATTERY / TEST
- < Pressing F key starts the test if your batteries are good you will see GOOD
- < If not then you will see CHANGE
- < Press the M key to pass to the next menu.

Event Resetting menu

- < When entering this menu you will see MEMORY / RESET
- < Press F key to reset your VIGIL to 0 events
- < Press the M key to pass to the next menu.

Delay Entry menu

- < When entering this menu you will see DELAY / 10 MIN.
- < Press F or A key to adjust the time of delay (from 1 min to 60 minutes)
- < Press the M key to pass to the next menu

Detection Zone Test menu

- < When entering this menu you will see ALIGN
- < Press the F key to start the test. Step back from VIGIL off to one side and advance slowly forward upon hearing sound from VIGIL, stop for 5-6 seconds after sound ends. Repeat this step.
- < With that you will know the detection area.
- < Press the M key to pass to the next menu

Camera option menu

- < When entering in this menu you will see 35mm CAM / On.
- < Pressing F key to choose the right camera you want to hook up.
- < If you choose VIDECAM press the A key to adjust the recording time (from 1 to 60 minutes)
- < Camera will be take a picture each time of the VIGIL recording an event.
- < Press the M key to pass to the next menu

Set monitoring time to the camera and camcorder

- < When entering this menu you will see CAM ON / 24/24 at this time the camera or camcorder is set to monitoring all time. If you want to set a pre time to come ON press A Key and set the time you want. After set the time come ON press the F key to set the time to come off and by pressing the key to adjust.
- < To return to monitoring 24/24 go to CAM ON menu and press A key until you see CAM ON 24/24 (just after 23:59)
- < Press M key to pass to the next menu

Sensor menu

- < When entering this menu you will see SENSOR / 10.
- < You can adjust the sensor by pressing key F or A
- < The lower the number the smaller the range and the higher the number the larger the range.
- < Press the M key and the VIGIL will be ready in 2 minutes.

Event Capture on / off menu

- < Pressing the A key will turn on or off the capture of events
- < ON = Active OFF = Deactivated (nonactive)

Characteristics

Memory - More than 650 events	Weatherproof - -20 to 70 Celcius
Security - 6 number passcode	Battery consumption - 120 days or more
Range - Over 75 feet	Options - Camera. Camcorder and PC
Detection zone - 10 degrees	Warranty - 1 year parts and labor